


Test Strip Assembly Machine

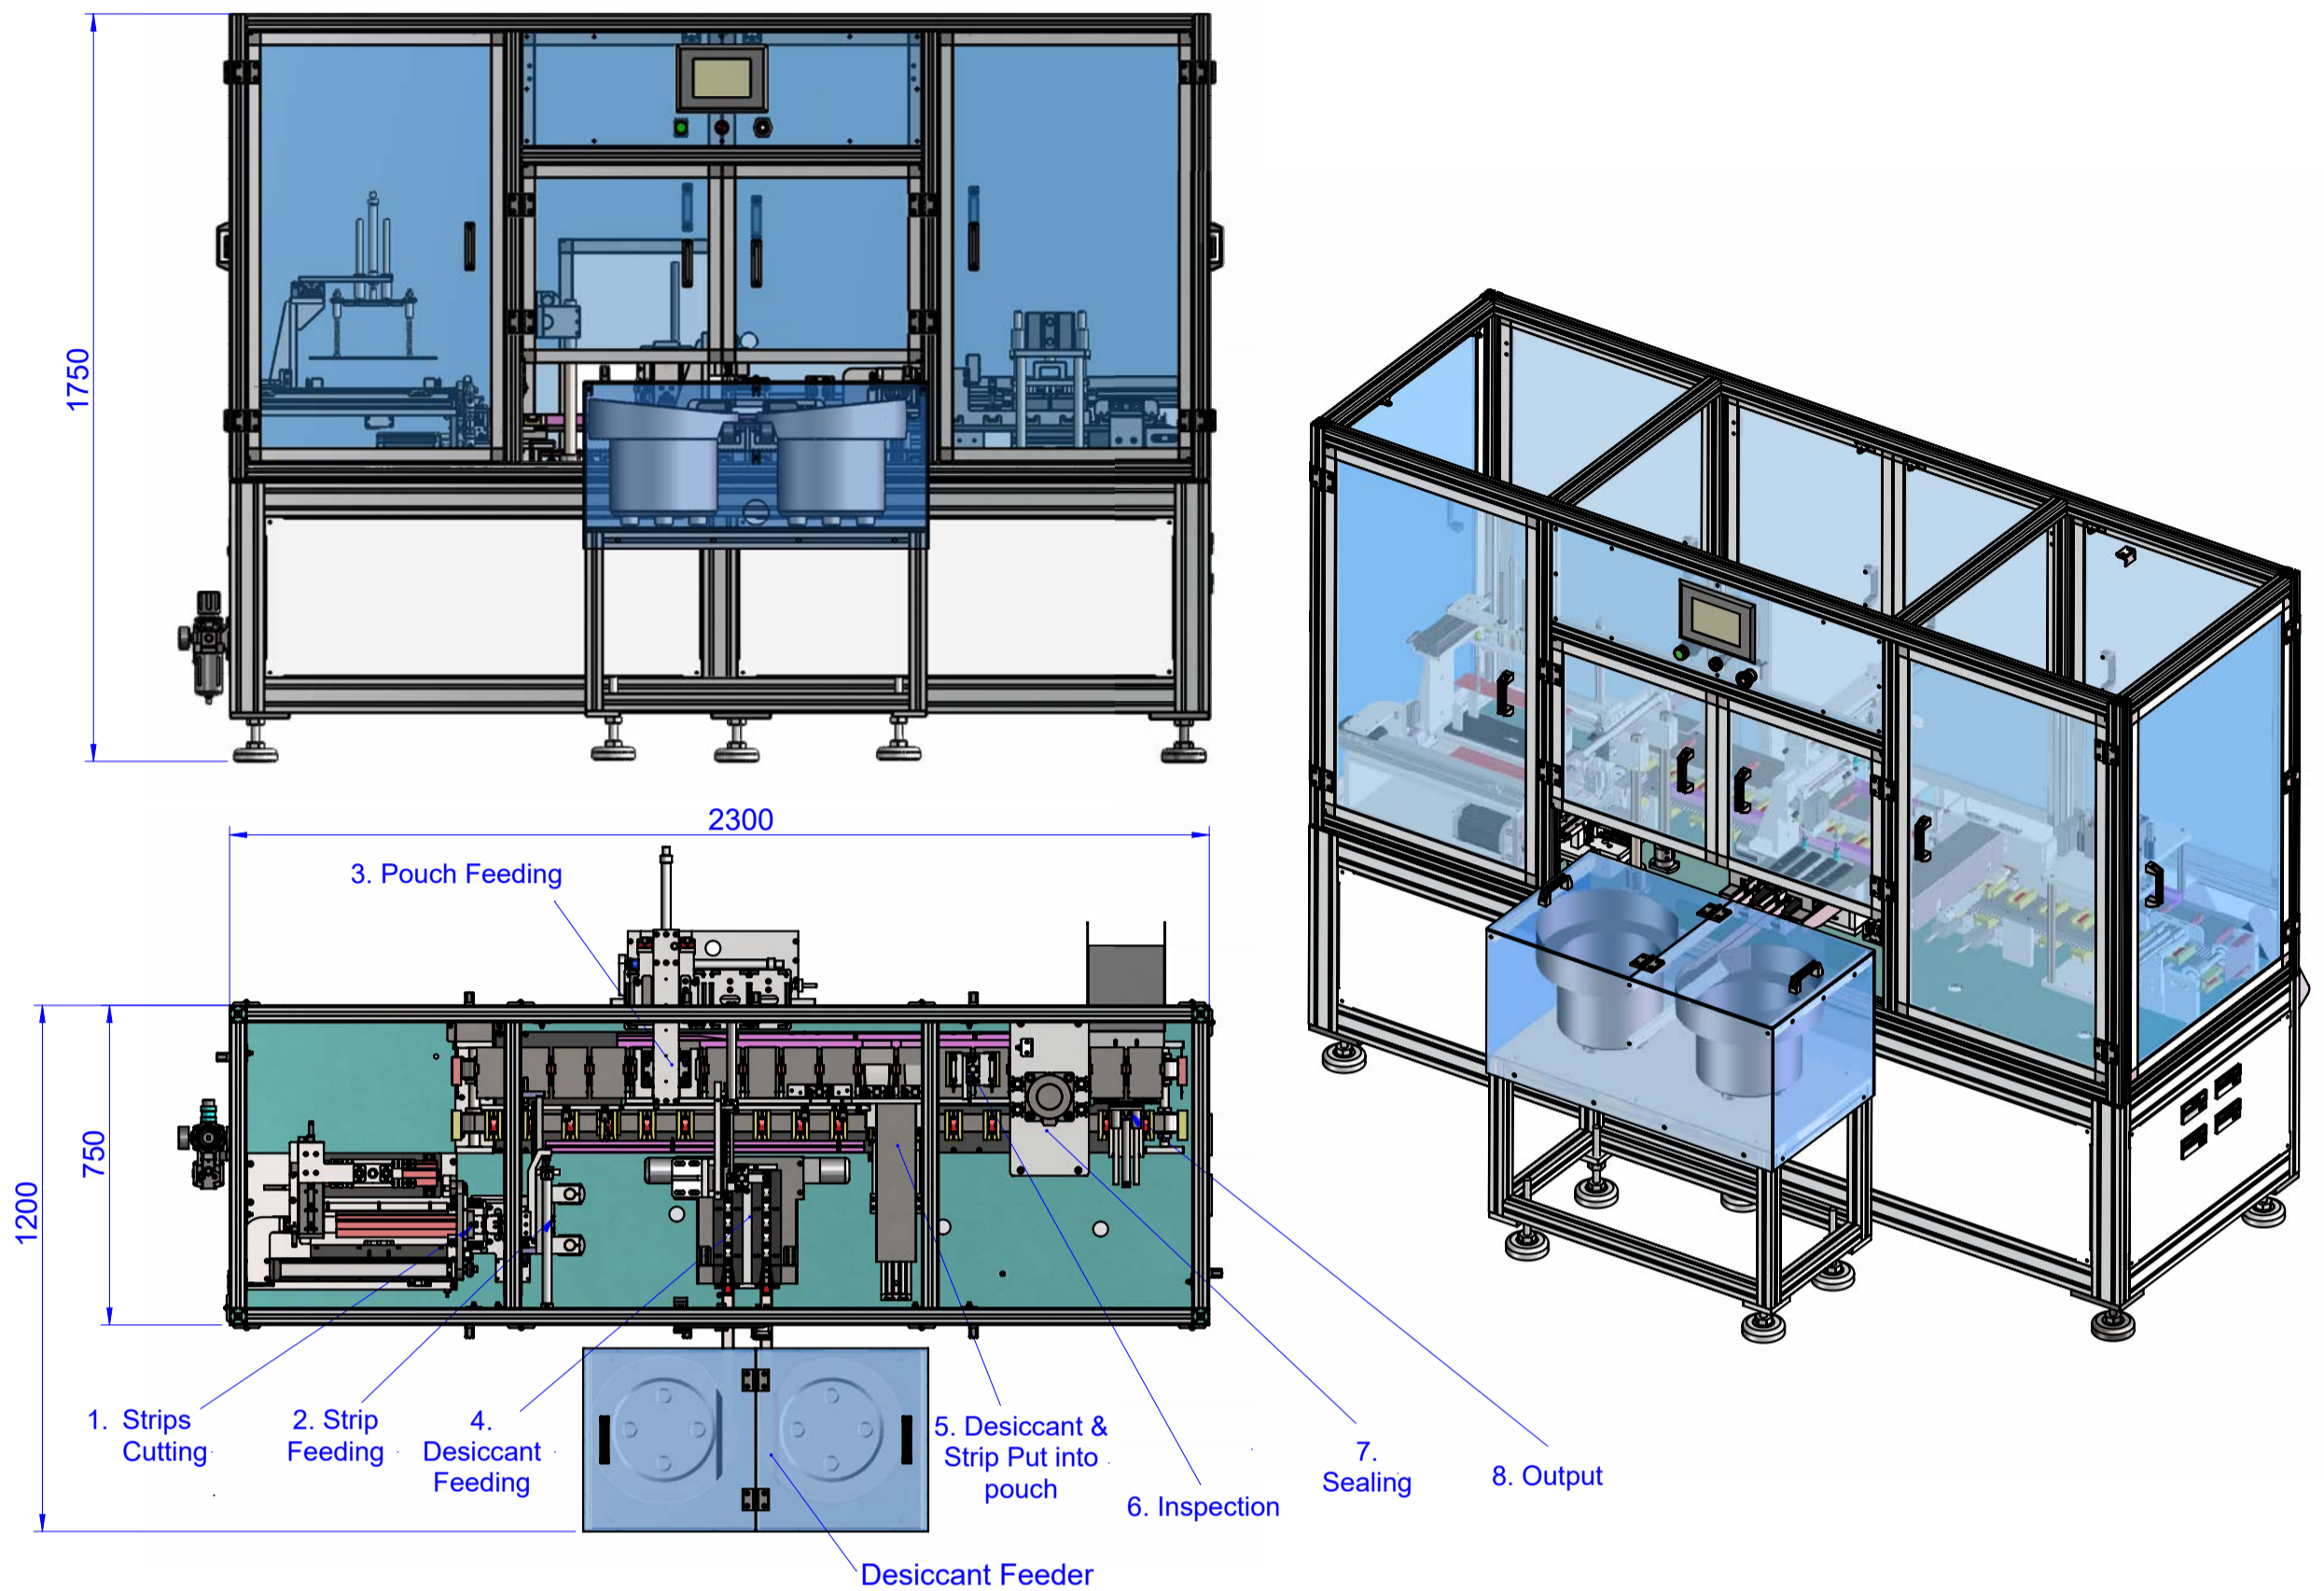

Parameters

Test Strip Assembly Machine	
Capacity	2,500-3,000 cassettes/hour
Uncut Sheet Cutting	Include
Power	3500 W
Power Supply	220V / 50Hz
Weight	270 kg
Dimension	1750mm* 2,300mm*1,200mm

Working procedures:

1. Strips Cutting
2. Strip Feeding
3. Pouch Feeding
4. Desiccant Feeding
5. Desiccant & Strip Put into pouch
6. Inspection
7. Sealing
8. Output